



## MANUAL DE CONFIGURACIÓN **EQUIPOS YEALINK**

---

 +52 55 4170-8422  
+1 305 644 5535  
+506 4000- 4000

 [ventas@callmyway.com](mailto:ventas@callmyway.com)


 [www.callmyway.com](http://www.callmyway.com)

Mayo, 2022

## Contenido

Ingreso a Interfaz Gráfica.....	2
Configuración de cuenta .....	2
Selección de Codecs .....	2
Configuraciones Avanzadas.....	2
Configuración de Características .....	2
Configuración de Ajustes.....	2
Cambio de contraseña .....	2

## Ingreso a Interfaz Gráfica

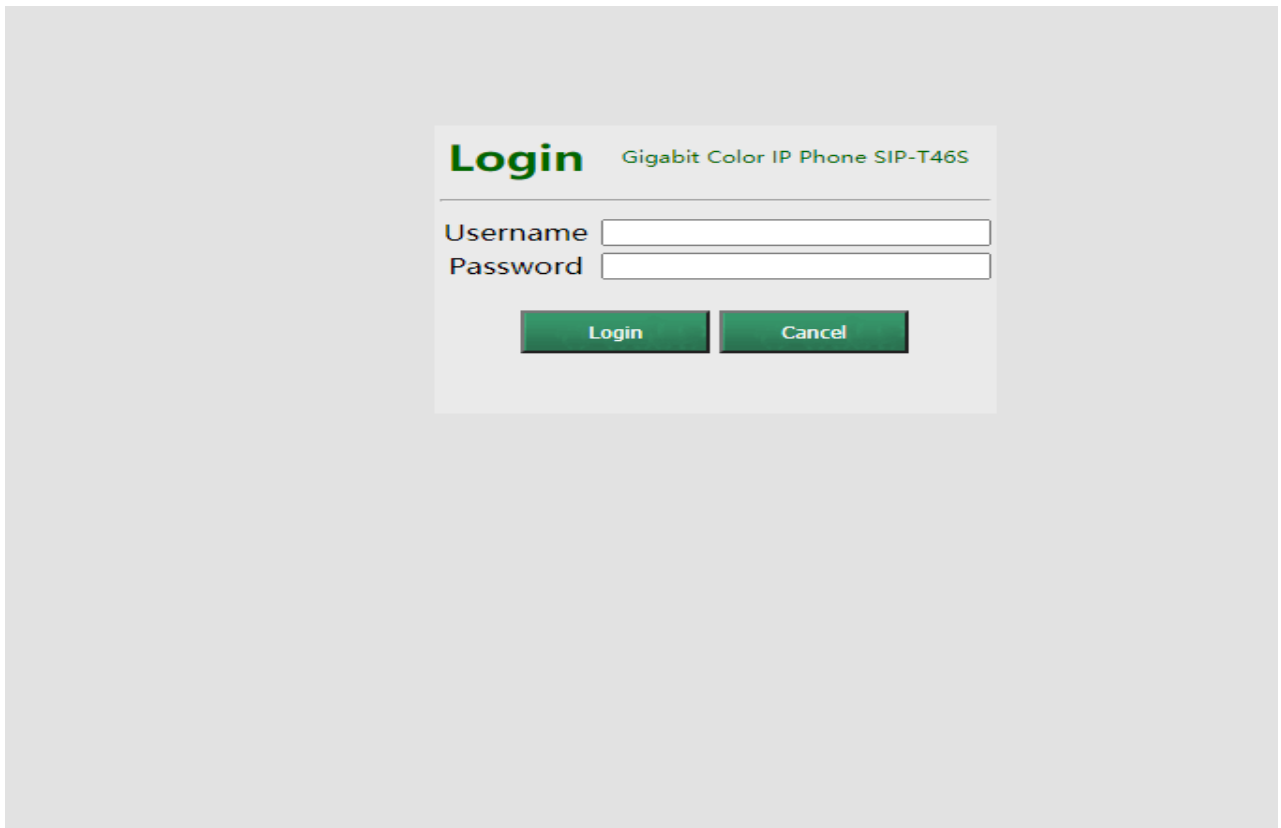

**Login** Gigabit Color IP Phone SIP-T46S

Username

Password

## Configuración de cuenta

Se debe configurar los siguientes parámetros:

- Account: Account1
- Line Active: Enable
- Label / Display Name: Nombre el Usuario
- Register Name: Usuario proporcionado por Call My Way
- Username: Usuario Brindado por Call My Way
- Password: Contraseña brindada por Call My Way
- Server Host: 10.24.255.2

**Yealink | T46S**

Status Account Network Dsskey Features Settings

Register

Basic

Codec

Advanced

**Account** Account1 ?

Register status Registered

Line Active Enabled ?

Label ?

Display Name ?

Register Name ?

Username ?

Password ?

**SIP Server 1**

Server Host 10.24.255.2 Port 5060 ?

Transport UDP ?


Server Expires 3600 ?

Server Retry Counts 3 ?

## Selección de Codecs

Se deben de habilitar los siguientes códecs

- PCMA
- PCMU

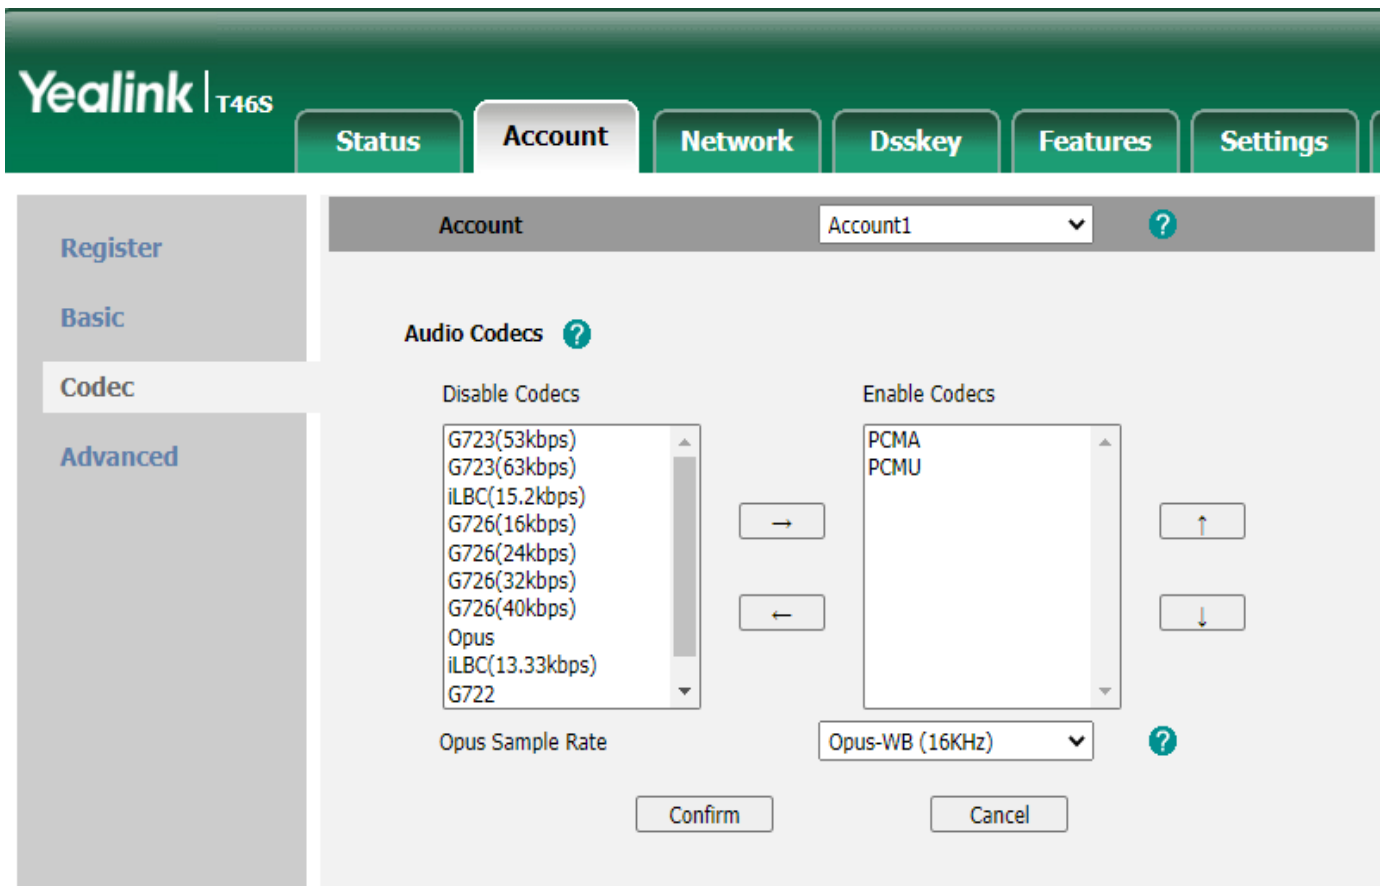

The screenshot shows the Yealink T46S web interface. The top navigation bar includes 'Status', 'Account', 'Network', 'Dsskey', 'Features', and 'Settings'. The 'Account' tab is selected, and the 'Codec' sub-tab is active. The 'Audio Codecs' section is displayed, showing two lists: 'Disable Codecs' and 'Enable Codecs'. The 'Disable Codecs' list includes G723(53kbps), G723(63kbps), iLBC(15.2kbps), G726(16kbps), G726(24kbps), G726(32kbps), G726(40kbps), Opus, iLBC(13.33kbps), and G722. The 'Enable Codecs' list includes PCMA and PCMU. The 'Opus Sample Rate' is set to 'Opus-WB (16KHz)'. There are 'Confirm' and 'Cancel' buttons at the bottom.

## Configuraciones Avanzadas

Se realiza en siguiente cambio

- RPort: Enable


The screenshot shows the Yealink T46S configuration interface. The 'Account' tab is selected, and the 'RPort' setting is set to 'Enabled'. The interface includes a sidebar with navigation options: Register, Basic, Codec, and Advanced. The main configuration area lists various settings for the account, each with a dropdown menu and a help icon.

Account	Account1	?
Keep Alive Type	Default	?
Keep Alive Interval (Seconds)	30	?
RPort	Enabled	?
Subscription Period (Seconds)	1800	?
DTMF Type	RFC2833	?
DTMF Info Type	DTMF-Relay	?

## Configuración de Características

En Información general bajamos hasta encontrar los siguientes parámetros y realizamos el siguiente cambio:

- Accept SIP Trust Server Only: Enable
- Allow IP Call: Disable

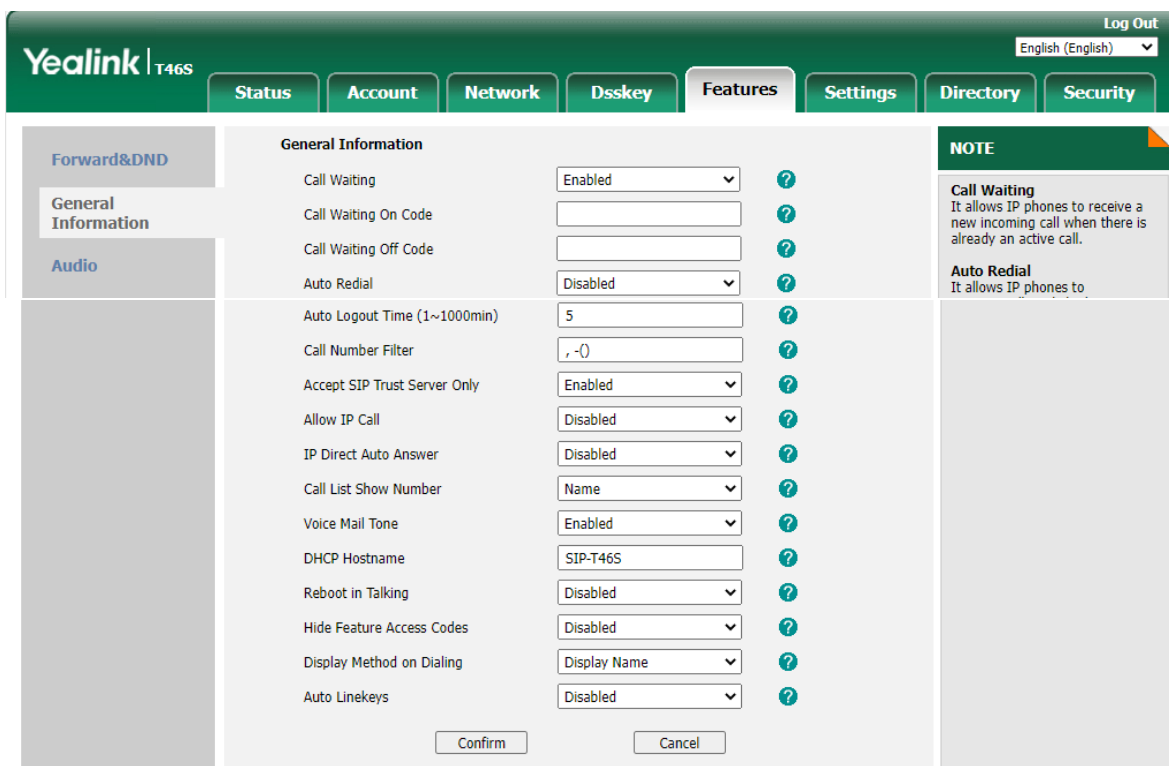

The screenshot shows the Yealink T46S configuration interface. The 'Features' tab is selected, and the 'General Information' section is expanded. The following table lists the visible settings:

Parameter	Value	Help
Call Waiting	Enabled	?
Call Waiting On Code		?
Call Waiting Off Code		?
Auto Redial	Disabled	?
Auto Logout Time (1~1000min)	5	?
Call Number Filter	, -()	?
Accept SIP Trust Server Only	Enabled	?
Allow IP Call	Disabled	?
IP Direct Auto Answer	Disabled	?
Call List Show Number	Name	?
Voice Mail Tone	Enabled	?
DHCP Hostname	SIP-T46S	?
Reboot in Talking	Disabled	?
Hide Feature Access Codes	Disabled	?
Display Method on Dialing	Display Name	?
Auto Linekeys	Disabled	?

**NOTE**


**Call Waiting**  
It allows IP phones to receive a new incoming call when there is already an active call.

**Auto Redial**  
It allows IP phones to...

Buttons: Confirm, Cancel

Se realizan los siguientes cambios:

- Time Zone: -6
- Location: Costa Rica
- Time Format: Hour 12
- Date Format: DD MMM YYYY

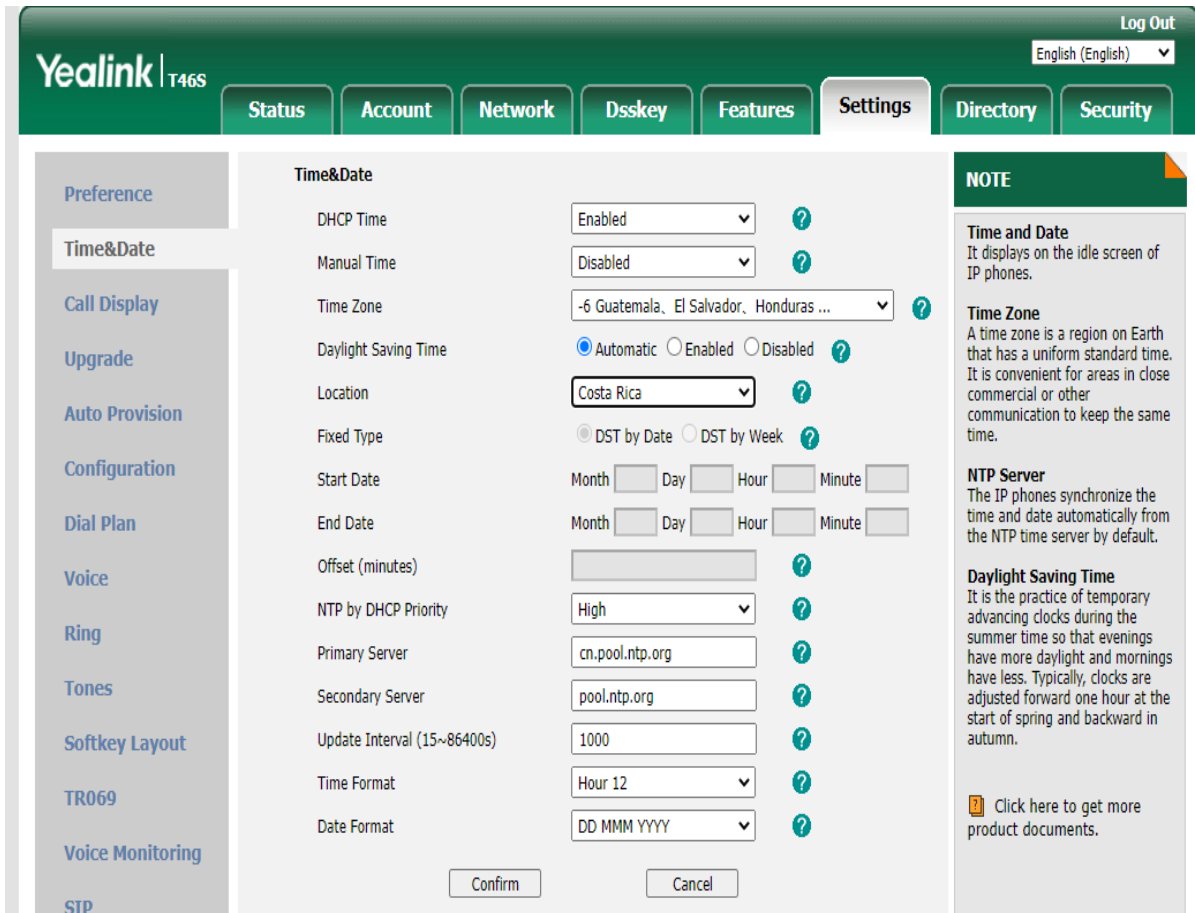

The screenshot shows the Yealink T46S web interface. The top navigation bar includes 'Status', 'Account', 'Network', 'Dsskey', 'Features', 'Settings', 'Directory', and 'Security'. The 'Settings' tab is active, and the 'Time&Date' sub-tab is selected in the left sidebar. The main content area displays the 'Time&Date' configuration options:

Setting	Value
DHCP Time	Enabled
Manual Time	Disabled
Time Zone	-6 Guatemala, El Salvador, Honduras ...
Daylight Saving Time	Automatic (selected)
Location	Costa Rica
Fixed Type	DST by Date (selected)
Start Date	Month [ ] Day [ ] Hour [ ] Minute [ ]
End Date	Month [ ] Day [ ] Hour [ ] Minute [ ]
Offset (minutes)	[ ]
NTP by DHCP Priority	High
Primary Server	cn.pool.ntp.org
Secondary Server	pool.ntp.org
Update Interval (15~86400s)	1000
Time Format	Hour 12
Date Format	DD MMM YYYY

At the bottom of the configuration area are 'Confirm' and 'Cancel' buttons. On the right side, there is a 'NOTE' section with the following text:

**Time and Date**  
It displays on the idle screen of IP phones.

**Time Zone**  
A time zone is a region on Earth that has a uniform standard time. It is convenient for areas in close commercial or other communication to keep the same time.


**NTP Server**  
The IP phones synchronize the time and date automatically from the NTP time server by default.

**Daylight Saving Time**  
It is the practice of temporary advancing clocks during the summer time so that evenings have more daylight and mornings have less. Typically, clocks are adjusted forward one hour at the start of spring and backward in autumn.

Click here to get more product documents.



Se realiza el cambio de contraseña para el usuario "Admin"

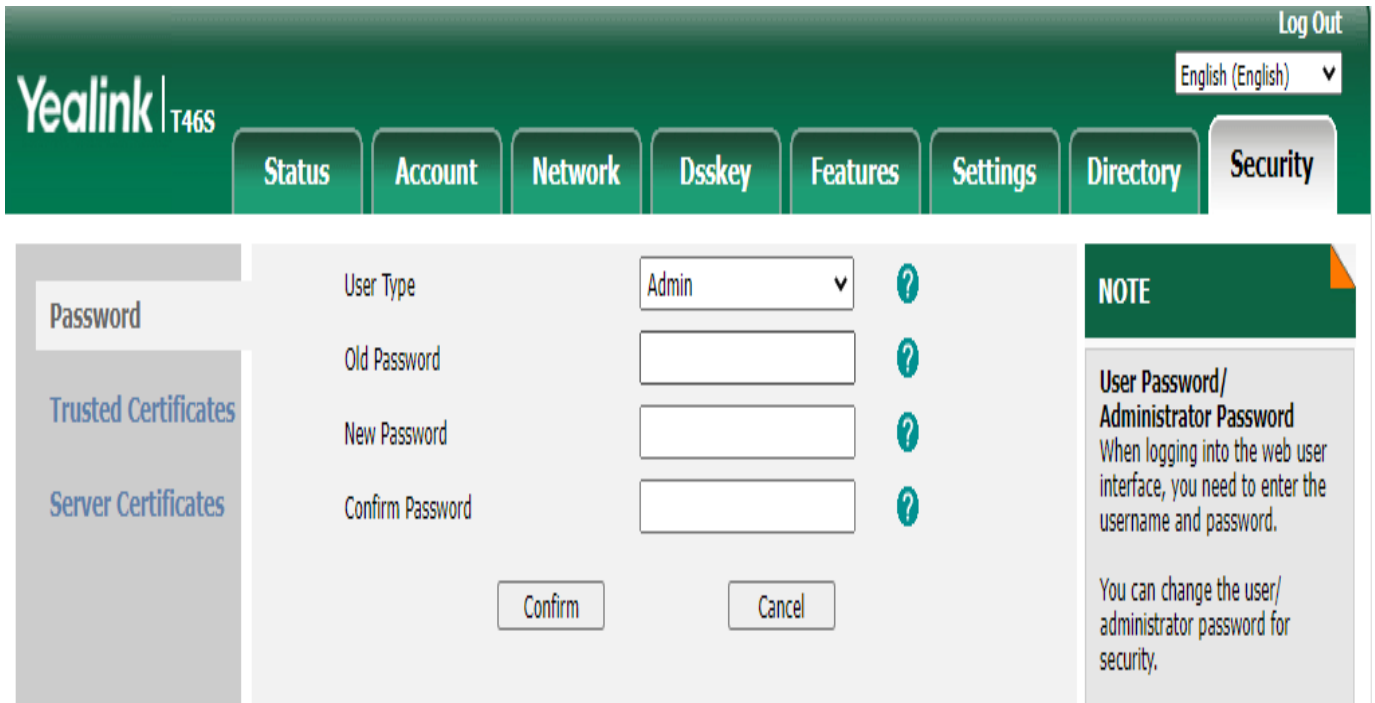

The screenshot shows the Yealink T46S web interface. At the top right, there is a "Log Out" link and a language dropdown menu set to "English (English)". Below the header is a navigation bar with tabs for "Status", "Account", "Network", "Dsskey", "Features", "Settings", "Directory", and "Security". The "Security" tab is active. On the left side, there is a sidebar with "Password" selected, and other options like "Trusted Certificates" and "Server Certificates". The main content area shows the "User Type" dropdown set to "Admin". Below it are three input fields for "Old Password", "New Password", and "Confirm Password", each with a help icon. At the bottom of the form are "Confirm" and "Cancel" buttons. On the right side, there is a "NOTE" box with the following text: "User Password/ Administrator Password. When logging into the web user interface, you need to enter the username and password. You can change the user/ administrator password for security."